
Media Player Registration Steps

Connecting the Cables and Device


After you obtain your subscription to the AutoNetTV program, you'll soon receive a media player (mini computer hardware), and the items shown here:

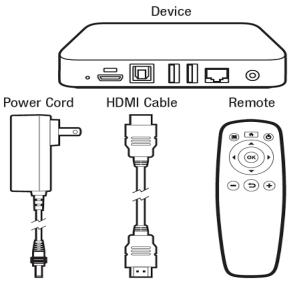

Your first steps are to connect your device to your TV, power, and your internet connection. Follow these steps:


HDMI

Connect one end of the included HDMI cable to the media player, and then into an HDMI port on your TV. Please note the port you're using on your TV (some TVs have 3 HDMI ports – and you'll need to choose the port # on your TV Remote Control in order to display the right "channel" or "input"). The HDMI cable carries both video and audio output.

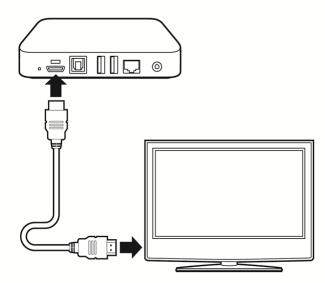


Ethernet cable

For Wired internet (only if this is how you'll connect the device), use your own Ethernet cable (not included) and plug it into the Ethernet port on the back of the device, and then into your network port – which may be in a wall outlet, or an open port on your internet router. Wireless (Wi-Fi) connectivity information is shown below.

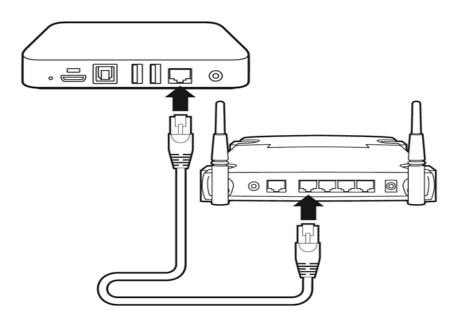

Power Cable

Plug the small end of the included power cord into the back of the device, and then plug the large end into a surge protector outlet (or a power strip). Once plugged in, the device will automatically turn itself on and start.

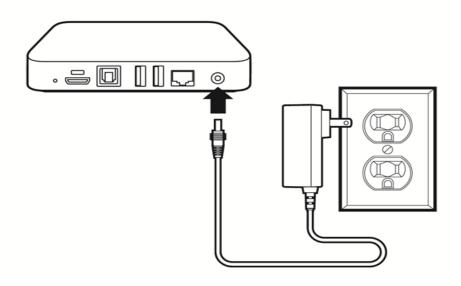

TV

Turn on your TV and choose the input/source port into which you plugged the device (such as HDMI 1, or HDMI 2). The Input or Source option is always located on the TV remote control, and also often located on the TV itself.

Registering the Device

Before you try to register your device, you must have the following:

1. A broadband Internet connection

- For Wi-Fi (Wireless) connections, you must know your Wireless Network Name (SSID) and Password. We do not recommend using guest access wireless to connect.
- If you have any network security (restrictions, Static IP, VPN, MAC Filtering, etc.) you
 must know this information and have the settings available.
- 2. The **media player device** which includes its HDMI cable (for video/audio), power cable and remote control (which you'll need to make selections and enter information). This is shipped in a small, square grey box from AutoNetTV.

Remote Control


The included remote control has only a few buttons. You'll never use the Home or Power buttons located at top, or the – and + buttons at the bottom. Here's a description of each.



Arrows: Used to move among items on screen or in the keyboard in system setup,

Return (bent arrow): To exit or go back to the previous screen.

With your device connected to the TV and to Power (and your Wired Internet - if you are not connecting Wireless), point the remote control at the front of the device for the following registration steps. You will use the included remote control to activate your player.

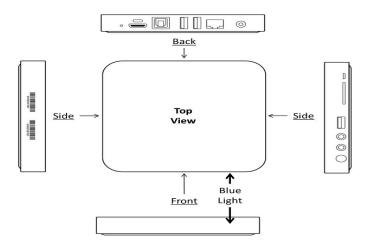

The following steps are on your TV Screen:


Screen 1 - Choose your language. Press the down arrow one time to highlight your chosen language and click the round OK button.

AutoNetTV	Language	STEP 1 OF 3
	HEL	LO
English	PLEASE CHOOSE YO	UR LANGUAGE.
Français 日本人 Espanol	Pointing your remote at the blue light of the media player, use the UP/DOWN arrows to select and the OK button to choose	

Screen 2 - Choose Internet Connection Type. Press the down arrow to highlight Wired (which requires an Ethernet cable to be plugged into the back of the device and into your router), or Wireless (Wi-Fi) if you will connect to an over-the-air router. If you already plugged in your Ethernet (for Wired), and there are no security restrictions on your network, the device will briefly show a green dot next to your connection, and automatically move to the Activation screen (Step 3).

AutoNetTV	Internet Connection	STEP 2 OF 3
	GETTING CLOS	ER
CHOOSE YOUR INTERNET OPTION		
Wired (Ethernet)		
Wireless (Wi-fi)		
For tutorial and step-by-step instructions, visit Login AutoNetTV com		

Screen 3 - Wireless Network Selection. If you choose Wireless, the device will display the available Wi-Fi networks. Use the up/down arrows to highlight your desired Wi-Fi network, and then press the round OK button.

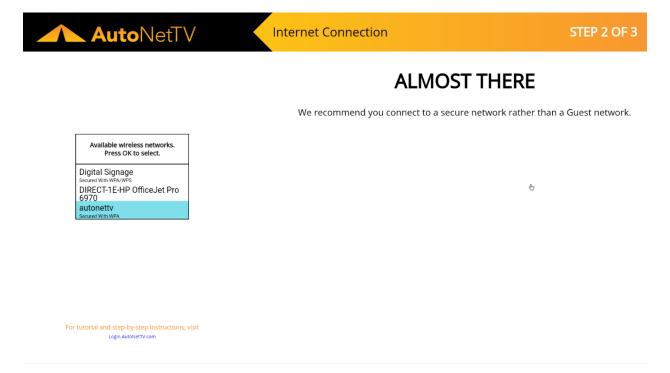

Screen 4 - Wireless Network Password. If you choose Wireless, the device will now prompt you to enter the password for the Wi-Fi network you just selected. Use the on-screen keyboard to enter your Wireless password. Use the @?, button in the on-screen keyboard to access special characters.

	Auto NetT	\bigvee			Interr	net Co	onneo	ction				STEP 2 OF 3
									AL	MO	ST T	THERE
	Available wireless networks. Press OK to select.	Wireless Enter the ne	. ,	sword for 'a	utonettv'							vork rather than a Guest network.
	Digital Signage Secured With WPA/WPS	1	2	3	4	5	6	7	8	0	0	
	Secured With WPA WPS autonetty Secured With WPA	a	b	c	d	e	f	q	h		i	
	DIRECT-1E-HP OfficeJet Pro	k	1	m	n	0	р	q	r	s	t	
	6970 DfRECTP9D~배환 OfficeJet Pro 6960	CAPS	u	v	w	×	у	z			CAPS	
	8960 위한 위해 관리 · Officejet 6600	@?,								BACI	KSPACE	
	DIRECT-52-HP M477					CON	INECT					
						SHOW P	ASSWORD					
Fo	r tutorial and step-by-step instruction: Login AutoNetTV.com											

Screen 6 - Activation Your device will automatically check in with our servers and find your account.



Activating device.....

Screen 8 - All Done! Yes, you are awesome.



To change the content that plays on your screen, login to your account at **Login.AutoNetTV.com**.

Screen 9 - File Download. Once activated, the device will connect to our servers and start downloading content that will rotate and display on screen for your program playlist. To make any changes to the services and prices on your menu, or to choose the service topics for which videos will display, simply login to your account at Login.AutoNetTV.com.